



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
TV/VIDEO	-/--
DISPLAY	
X2	
VCR+	
COUNTER	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SLOW	BACK
TIMER	SLEEP
TV/VCR	TV/DTV
COMMERCIAL SKIP	INFO
SEARCH	EPG
SP EP	FAV
EJECT	 / NET TV

[illegible]