



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
M/P	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/RADIO	TV/DTV
INFO	INFO
GUIDE	EPG
FAV	FAV
RED / ZOOM	RED
GREEN / ASPECT	GREEN

ORIGINAL	SUPERIOR
YELLOW / V-FORMAT	YELLOW
BLUE / TIMER	BLUE
AUDIO	SHIFT+MUTE
SWAP	SHIFT+2
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
REPEAT A – B	SHIFT+BACK
PAUSE/TIMESHIFT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

