



ORIGINAL	SUPERIOR
ON	POWER
MUTE	MUTE
CD SYNC.	MENU
DISC SKIP	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEST	-/--
VOLUME+	VOL+
VOLUME -	VOL -
CS SKIP NEXT	P+
CD SKIP PREV	P -
REAR+	UP
REAR -	DOWN
CENTER -	LEFT
CENTER+	RIGHT
CENTER MODE	OK
SURROUND ON/OFF	BACK
SLEEP	SLEEP
BAND	TV/DTV
SURROUND DELAY	INFO
SURROUND MODE	EPG
DIRECT	FAV
CD PAUSE	
CD STOP	■ / SMART
CD PLAY/PAUSE	YELLOW

ORIGINAL	SUPERIOR
STANDBY	SHIFT+POWER
AV - 3	SHIFT+1
AV - 2	SHIFT+2
AV - 1	SHIFT+3
TUNER	SHIFT+4
PHONO	SHIFT+5
CD	SHIFT+6
P.CALL+	SHIFT+ VOL+
P.CALL -	SHIFT+ VOL -
TUNING+	SHIFT+ P+
TUNING -	SHIFT+ P -
TAPE I	SHIFT+UP
TAPE II	SHIFT+DOWN
TAPE M.	SHIFT+OK
TAPE REV. PLAY	SHIFT+BACK
TAPE STOP	SHIFT+ ■
TAPE REC	SHIFT+RED
TAPE PLAY	SHIFT+YELLOW

