



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USER	/ AV
CONTEXT	-/--
PVR	
MUSIC	
MOVIE	
TXT	
VOL+	VOL+
VOL-	VOL-
PAGE+	P+
PAGE-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SLEEP	SLEEP
TV	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+AUDIO
PICS	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
RADIO	SHIFT+TV/DTV
HELP	SHIFT+INFO
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

