



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TV MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD TV/AV	/ SOURCE
DISPLAY	
/ SETUP	
/ REPEAT	
TEXT	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / ENTER	OK
SLEEP	SLEEP
/ A - B	INFO
NORMAL	FAV
ASPECT	/ NET TV
RED/PROGRAM/CLEAR	RED
GREEN / MOVIE	GREEN

ORIGINAL	SUPERIOR
YELLOW / SEARCH	YELLOW
BLUE	BLUE
AUDIO	FT+MUTE
DVD MENU	SHIFT+MENU
	SHIFT+EXIT
SOUND MODE	SHIFT+1
3D	SHIFT+3
	SHIFT+
	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
/ TITLE / PBC	SHIFT+INFO
OPEN / CLOSE	SHIFT+
STOP	SHIFT+
F. R / SLOW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
F. F / SLOW	SHIFT+BLUE

