



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
OPTION	MENU
ECO / ECO	EXIT
AUX 1	1
AUX 2	2
BLU – RAY	3
CD	4
DVD	5
GAME	6
INTERNET RADIO	7
MEDIA PLAYER	8
PHONO	9
TUNER	0
TV / RADIO	□ / SOURCE
USB	-/--
SETUP	□
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT / TUNE+	P+
SKIP PREV / TUNE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT

ORIGINAL	SUPERIOR
ENTER	OK
BACK	BACK
SLEEP	SLEEP
CBL / SAT	TV/DTV
BLUETOOTH	FAV
INFO	INFO
PLAY / PAUSE	YELLOW
QUICK SELECT 1	SHIFT+1
QUICK SELECT 2	SHIFT+2
QUICK SELECT 3	SHIFT+3
QUICK SELECT 4	SHIFT+4
CH / PAGE+	SHIFT+ P+
CH / PAGE -	SHIFT+ P -
RED / MUSIC	SHIFT+RED
GREEN / MOVIE	SHIFT+GREEN
YELLOW / PURE	SHIFT+YELLOW
BLUE / GAME	SHIFT+BLUE

