



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
OPTION	MENU
ECO	EXIT
AM	1
BLUETOOTH	2
BLU – RAY	3
CBL/SAT	4
DVD/BLU – RAY	5
FM	6
GAME	7
MEDIA PLAYER	8
TV AUDIO	9
USB	0
CH LEVEL	-/--
QUICK SELECT 1	
QUICK SELECT 2	
QUICK SELECT 3	
QUICK SELECT 4	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT/TUNE+	P+
SKIP PREV/TUNE -	P -
UP	UP
DOWN	DOWN

ORIGINAL	SUPERIOR
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
MODE	TV/DTV
INFO	INFO
MEMORY	EPG
PLAY/PAUSE	YELLOW
SETUP	SHIFT+
AUDIO DELAY+	SHIFT+ VOL+
AUDIO DELAY -	SHFIT+ VOL -
CH/PAGE+	SHIFT+ P+
CH/PAGE -	SHIFT+ P -
< SOUND MDOE	SHIFT+LEFT
SOUND MODE >	SHIFT+RIGHT

