



ORIGINAL	SUPERIOR
POWER ON	POWER
MUTE	MUTE
MENU	MENU
SEARCH	EXIT
BD	1
DOCK	2
DVD	3
GAME	4
INPUT MODE	5
SAT/CBL	6
TUNER	7
TV	8
V. AUX	9
SHIFT	-/--
QUICK SEL. 1 (BD)	
QUICK SEL. 2 (SAT/CBL)	
QUICK SEL. 3 (DOCK)	
NIGHT	
VOLUME+	VOL+
VOLUME -	VOL -
CHANNEL+	P+
CHANNEL -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT

ORIGINAL	SUPERIOR
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
RESTORER	TV/DTV
DIMMER	INFO
POWER OFF	SHIFT+POWER
AUDIO DELAY	SHIFT+MUTE
STATUS	SHIFT+EXIT
TEST	SHIFT+
TONE	SHIFT+
BAND	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
< SURROUND	SHIFT+LEFT
SURROUND >	SHIFT+RIGHT
SURROUND PARAMETER	SHIFT+OK
IPOD REPEAT	SHIFT+BACK
IPOD RANDOM	SHIFT+TV/DTV
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

