



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / SOURCE
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RESUME	BACK
EQ	SLEEP
SHUFFLE	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
ANGLE	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
GOTO	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
VOCAL ASSIST	SHIFT+MENU
DISC 1	SHIFT+1
DISC 2	SHIFT+2
DISC 3	SHIFT+3
PCB OFF	SHIFT+4
P/N	SHIFT+5
VSS	SHIFT+6
SLOW	SHIFT+LEFT
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
STEP	SHIFT+FAV

