



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
TV – MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
-/--	-/--
DISPLAY	
SIZE / ANGLE	
DVD – SETUP	
TV/TXT / LANGUAGE	
VOL+ / RIGHT	VOL+
VOL - / LEFT	VOL -
CH+ / UP	P+
CH - / DOWN	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DTV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
PICTURE	/ NET TV
HOLD / MENU	/ SMART
RED / PROGRAM	RED
GREEN / SLOW	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
SOUND	SHIFT+MUTE
CANCEL / ZOOM	SHIFT+EXIT
NICAM / A2	SHIFT+1
CHANNEL LIST	SHIFT+ -/--
REVEAL / SUBTITLE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUBPAGE / TITLE	SHIFT+DOWN
TV / RADIO	SHIFT+ TV/DTV
INDEX / GO TO	SHIFT+INFO
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

