



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GO TO	/ AV
+10	-/--
DISPLAY	
ZOOM	
ANGLE	
SUB-T.	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
KODAK T. E.	SLEEP
P / N	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
SHUFFLE	FAV
EJECT	
PAUSE	
STOP	
REV.	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
TV MODE	SHIFT+ / AV
SETUP	SHIFT+
A-B RPT.	SHIFT+BACK
STEP	SHIFT+SLEEP
SLOW	SHIFT+
RESUME	SHIFT+YELLOW

