



ORIGINAL	SUPERIOR
STANDBY	POWER
	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	 / SOURCE
LIST	-/--
F1	
SUBT.	
OPT.	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / BACK	BACK
TV / RAD.	TV/DTV
i / INFO	INFO
EPG	EPG

[illegible]