



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
MENU	MENU
RESTART	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
CL	-/--
DISPLAY	
ZOOM	
ANGLE	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
TIME SHIFT	SLEEP
TV / DVD	TV/DTV
TITLE	INFO
RANDOM	EPG
BOOKMARK	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	
PAUSE	
STOP	
REC	RED
SCAN - REV.	GREEN
PLAY	YELLOW
SCAN - FWD	BLUE
AUDIO	SHIFT+MUTE
DVD / HDD	SHIFT+AV
EDIT	SHIFT+ -/--
HIDE	SHIFT+
SETUP	SHIFT+
CHANNEL-	SHIFT+ P-
CHANNEL+	SHIFT+ P+
REPLAY	SHIFT+LEFT
SKIP	SHIFT+RIGHT
A-B	SHIFT+BACK
TV MODE	SHIFT+ TV/DTV
REC MODE	SHIFT+RED
STEP - REV.	SHIFT+GREEN
STEP - FWD	SHIFT+BLUE

