



ORIGINAL	SUPERIOR
POWER	POWER
MUTING	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	 / AV
RANDOM	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP PREV.	P+
SKIP NEXT	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
KEY LOCK	SLEEP
AUDIO MODE	TV/DTV
DIGEST	INFO
TOP MENU	EPG
BOKMARK	FAV

[illegible]