



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
RAN	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/10-0	6/7/8/9/0
DVD / USB	/ SOURCE
+10	-/--
OSD	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
STEP	SLEEP
N / P	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROG	EPG
LANGUAGE	FAV
OPEN / CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SLOW	SHIFT+EXIT
PBC	SHIFT+
IS / PS	SHIFT+
L / R	SHIFT+
ANGLE	SHIFT+
A - B	SHIFT+BACK
TIME	SHIFT+SLEEP

