



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
URL/SECOND AUDIO	 / SOURCE
CAPS/NUM	-/--
DUNE	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CLEAR	BACK
MODE	TV/DTV
INFO	INFO
POPUP MENU	EPG

ORIGINAL	SUPERIOR
ANGLE	FAV
EJECT	 / NET TV
PAUSE	 / SMART TUBE
STOP	 / SMART VIDEO
SHUFFLE	RED
REW	GREEN
PLAY	YELLOW
BLU	BLUE
OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
A/B/C/D	SHIFT+1/2/3/4
PIP	SHIFT+5
ON	SHIFT+0
SLOW	SHIFT+RIGHT
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
REPEAT	SHIFT+BACK
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

