



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
URL	/ AV
CAPS/NUM	-/--
DUNE	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT CHAP	P+
SKIP PREV CHAP	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CLEAR / BACK	BACK
MODE	TV/DTV
INFO	INFO
POP UP MENU	EPG

ORIGINAL	SUPERIOR
ANGLE	FAV
EJECT	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
PAUSE	BLUE
OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
A	SHIFT+1
B	SHIFT+2
C	SHIFT+3
D	SHIFT+4
ON	SHIFT+0
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
SLOW	SHIFT+RIGHT
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLU	SHIFT+BLU

