



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CAPS/NUM	-/--
SELECT BUTTON	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
INFO	INFO
POP UP MENU	EPG
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
PAUSE	

[illegible]