



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
POP UP MENU	MENU
← / CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ MODE	/ SOURCE
SELECT / CAPS NUM.	-/--
DUNE	
/ ZOOM	
SETUP	
SEUBTITLE	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
↶ / RETURN	BACK
ANGLE / ROTATE	TV/DTV
i	INFO
URL	EPG

ORIGINAL	SUPERIOR
TOP MENU	FAV
EJECT	/ NET TV
RED / A	RED
GREEN / B	GREEN
YELLOW / C	YELLOW
BLUE / D	BLUE
AUDIO	SHIFT+MUTE
/ SEARCH	SHIFT+EXIT
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P -
SLOW	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHFIT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

