



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
POP UP MNEU	MENU
← CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SELECT / cap/num	-/--
DUNE	
/ ZOOM	
SETUP	
SUBTITLE	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
/ MODE	TV/DTV
INFO	INFO
URL	EPG
TOP MENU	FAV

ORIGINAL	SUPERIOR
RED/A	RED
GREEN/B	GREEN
YELLOW/C	YELLOW
BLUE/D	BLUE
AUDIO	SHIFT+MUTE
SEARCH / ?	SHIFT+EXIT
ANGLE/ROTATE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SLOW	SIFT+SLEEP
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

