



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
RADIO / REC	-/--
[] / HELP	[]
VIDEO	[]
[] / TEXT	[]
VOLUME+	VOL+
VOLUME-	VOL-
BOUQUET+	P+
BOUQUET-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TV / STOP	TV/DTV
INFO	INFO
MEDIA	EPG
★	FAV
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
<	SHIFT+LEFT
>	SHIFT+RIGHT
PAUSE	SHIFT+[]
PVR STOP	SHIFT+[]
PVR REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

