



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISPLAY	
ANGLE	
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT A – B	BACK
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
ZOOM	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP

[illegible]