



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ AV
DVR	-/--
DISP	
ZOOM	
SUB / SWP	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV / A - B	FAV
RED / FIND	RED
GREEN	GREEN
YELLOW / MARK	YELLOW
BLUE / JUMP	BLUE
AUDIO	SHIFT+MUTE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
P ↑	SHIFT+UP
P ↓	SHIFT+DOWN
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

