



| ORIGINAL  | SUPERIOR  |
|-----------|-----------|
| POWER     | POWER     |
| MUTE      | MUTE      |
| MENU      | MENU      |
| EXIT      | EXIT      |
| 1/2/3/4/5 | 1/2/3/4/5 |
| 6/7/8/9/0 | 6/7/8/9/0 |
| USB       | / SOURCE  |
| SAT       | -/--      |
| DISPLAY   |           |
| F1        |           |
| MODE      |           |
| TXT       |           |
| VOL+      | VOL+      |
| VOL -     | VOL -     |
| CH+       | P+        |
| CH -      | P -       |
| UP        | UP        |
| DOWN      | DOWN      |
| LEFT      | LEFT      |
| RIGHT     | RIGHT     |
| OK        | OK        |
| RECALL    | BACK      |
| SLEEP     | SLEEP     |
| TV / R    | TV/DTV    |
| FIND      | INFO      |

| ORIGINAL      | SUPERIOR     |
|---------------|--------------|
| EPG           | EPG          |
| FAV           | FAV          |
| RED / AUDIO   | RED          |
| GREEN / PAUSE | GREEN        |
| YELLOW / ZOOM | YELLOW       |
| BLUE / INFO   | BLUE         |
| TIMER         | SHIFT+POWER  |
| SUB           | SHIFT+       |
| SKIP NEXT     | SHIFT+ P+    |
| SKIP PREV     | SHIFT+ P -   |
| PAGE UP       | SHIFT+UP     |
| PAGE DOWN     | SHIFT+DOWN   |
| PAUSE         | SHIFT+       |
| STOP          | SHIFT+       |
| REC           | SHIFT+RED    |
| REW           | SHIFT+GREEN  |
| PLAY          | SHIFT+YELLOW |
| FWD           | SHIFT+BLUE   |
|               |              |
|               |              |
|               |              |
|               |              |
|               |              |
|               |              |
|               |              |

