



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SAT	/ AV
USB	-/--
EDIT	
GOTO	
YOUTUBE	
TXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TV / R.	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
JPEG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW / V-OUT	YELLOW
BLUE / FORMAT	BLUE
AUDIO	SHIFT+MUTE
MP3	SHIFT+
ZOOM	SHIFT+
PVR LIST	SHIFT+
SUB.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
FAV-	SHIFT+LEFT
FAV+	SHIFT+RIGHT
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

