



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ MENU	MENU
DELETE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
CAPS / NUM	-/--
/ HOME	
ZOOM	
/ SETUP	
AA / SUBTITLE	
PAGE UP	P+
PAGE DOWN	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
/ TIME SEEK	SLEEP
/ TV MODE	TV/DTV
INFO	INFO
/ FILE MODE	EPG
/ ANGLE	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
Zzz / STANDBY	SHIFT+POWER
/ AUDIO	SHIFT+MUTE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
/ REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP
/ TITLE	SHIFT+INFO
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+GREEN

