



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / PBC	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/10	6/7/8/9/0
VIDEO	/ SOURCE
10+	-/--
DISPLAY	
GOTO	
SETUP	
DEFAULT	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLOW	SLEEP
DVD / USB	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
ANGLE	EPG
PROG.	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
ZOOM	SHIFT+
SUB. / CD RIP.	SHIFT+
L / R	SHIFT+LEFT
N / P	SHIFT+RIGHT
A - B	SHIFT+BACK
STEP	SHIFT+SLEEP
LANGUAGE	SHIFT+FAV

