



ORIGINAL	REPLACEMENT	ORIGINAL	REPLACEMENT
POWER	POWER	BLUE	BLUE
MUTE	MUTE	AUDIO	SHIFT+MUTE
	MENU	SETUP	SHIFT+ 
1/2/3/4/5	1/2/3/4/5	SKIP PREV.	SHIFT+ P-
6/7/8/9/0	6/7/8/9/0	SKIP NEXT	SHIFT+ P+
DVD	AV	REPEAT	SHIFT+BACK
DEVICE	-/--	PAUSE	SHIFT+ 
SLIDE		STOP	SHIFT+ 
ZOOM		REC	SHIFT+RED
OPTION		REW	SHIFT+GREEN
SUBTITLE		PLAY	SHIFT+YELLOW
VOL+	VOL+	FWD	SHIFT+BLUE
VOL-	VOL-		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
RETURN	BACK		
TIME SHIFT	SLEEP		
TV SYS.	TV/DTV		
SLOW			
RED	RED		
GREEN / EPG	GREEN		
YELLOW / TTX	YELLOW		

