



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER	SETUP	SHIFT+ 
MUTE	MUTE		
MENU / ZOOM	MENU		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
GO TO	 / SOURCE		
SOURCE	-/--		
DISPLAY			
ANGLE/AUDIO			
VOL+	VOL+		
VOL -	VOL-		
SKIP NEXT	P+		
SKIP PREV	P-		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
TITLE / SUBTITLE	INFO		
PROG. / REPEAT	EPG		
OPEN / CLOSE	 / NET TV		
STOP	 / SMART		
REV.	GREEN		
PLAY / PAUSE	YELLOW		
FWD	BLUE		

