



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU / PG. DN.	MENU
CLEAR / RECALL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD / DVB	/ AV
GO TO	-/--
VIDEO / LIST	
TTX / PROG.	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / EXIT	BACK
TIMER / SLOW	SLEEP
TV/RADIO / P/N	TV/DTV
INFO / DISPLAY	INFO
FAV / ANGLE	FAV
RED / ZOOM	RED

ORIGINAL	SUPERIOR
GREEN / ASPE. / STEP	GREEN
YELLOW / HDMI	YELLOW
BLUE / Q-PLAY	BLUE
AUDIO / LANG.	SHIFT+MUTE
USB	SHIFT+AV
SETUP	SHIFT+
SUBTITLE	SHIFT+
SKIP PREV.	SHIFT+ P -
SKIP NEXT	SHIFT+ P+
REPEAT	SHIFT+BACK
TIMESHIFT / A-B	SHIFT+SLEEP
TITLE / PG. UP	SHIFT+INFO
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

