



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
MODE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / AV
10+	-/--
DISPLAY	
GOTO	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
STEP	SLEEP
AB	TV/DTV
TITLE	INFO
ANGLE	EPG
PROGRAM	FAV

[illegible]