



ORIGINAL	REPLACEMENT
STANDBY – ON	POWER
AUDIO	MUTE
TOP MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	AV
MENU / LIST	-/--
DISPLAY	
HDMI	
SETUP	
TEXT	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER / OK	OK
RETURN / BACK	BACK
TIME SHIFT	SLEEP
1.3x/0.8x PLAY	TV/DTV
i+	INFO
GUIDE	EPG
DUBBING	FAV

ORIGINAL	REPLACEMENT
OPEN/CLOSE / EJECT	
PAUSE	
STOP	
REC	RED
REV.	GREEN
PLAY	YELLOW
FWD	BLUE
VCR	SHIFT+1
DVD	SHIFT+2
SAT. LINK	SHIFT+7
SUBTITLE	SHIFT+
PROG. -	SHIFT+ P-
PROG. +	SHIFT+ P+
CM SKIP	SHIFT+RIGHT
TIMER SET	SHIFT+SLEEP
TIMER PROG.	SHIFT+EPG
REC. SPEED	SHIFT+
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW / SYSTEM	SHIFT+YELLOW
BLUE / SEARCH	SHIFT+BLUE

