



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ALT	-/--
SUB.	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TV	TV/DTV
i / WHITE	INFO
EPG	EPG
BROWSE	FAV
FREEZE	
RED	RED
GREEN	GREEN

[illegible]