



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD / USB	/ SOURCE
10+	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TIME	SLEEP
N/P	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROG	EPG
RANDOM	FAV
OPEN/CLOSE	/ NET TV
STOP	/ SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
LANGUAGE	SHIFT+MUTE
RESUME	SHIFT+MENU
DEFAULT	SHIFT+EXIT
PBC	SHIFT+
A - B	SHIFT+
ANGLE	SHIFT+
V - MODE	SHIFT+
SLOW	SHIFT+LEFT
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
L/R	SHIFT+TV/DTV

