



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / USB	RED
GREEN / SUB.	GREEN
YELLOW / TTX	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE

[illegible]