



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BACKSPACE	-/--
V – FORMAT	
RESOLUTION	
GROUP	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
/ SLEEP	SLEEP
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
F4	SHIFT+4
TAB	SHIFT+
/ CURSOR	SHIFT+
PLAYLIST	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

