



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	 / SOURCE
LIST	-/--
TEXT	
VOL +	VOL +
VOL -	VOL -
CH +	P +
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMER	SLEEP
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
	RED

[illegible]