



ORIGINAL	SUPERIOR
STANDBY/ON	POWER
AUDIO	MUTE
MENU / LIST	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
HDMI	-/--
DISPLAY	
1.3X/0.8X PLAY	
SETUP	
TEXT	
PROG.+	P+
PROG. -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/ENTER	OK
RETURN/BACK	BACK
TIME SHIFT	SLEEP
SAT. LINK	TV/DTV
i+	INFO
GUIDE	EPG
TOP MENU	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW/SYSTEM	YELLOW
BLUE/SEARCH	BLUE
TIMER PROG.	SHIFT+POWER
DVD	SHIFT+1
HDD	SHIFT+2
VCR	SHIFT+3
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
VARIABLE REPLAY	SHIFT+LEFT
VARIABLE SKIP	SHIFT+RIGHT
REC SPEED	SHIFT+SLEEP
DUBBING	SHIFT+FAV
EJECT / OPEN/CLOSE	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

