



| ORIGINAL       | SUPERIOR  |
|----------------|-----------|
| STANDBY/ON     | POWER     |
| AUDIO          | MUTE      |
| MENU / LIST    | MENU      |
| CLEAR          | EXIT      |
| 1/2/3/4/5      | 1/2/3/4/5 |
| 6/7/8/9/0      | 6/7/8/9/0 |
| INPUT SELECT   | / SOURCE  |
| HDMI           | -/--      |
| DISPLAY        |           |
| 1.3X/0.8X PLAY |           |
| SETUP          |           |
| TEXT           |           |
| PROG.+         | P+        |
| PROG. -        | P -       |
| UP             | UP        |
| DOWN           | DOWN      |
| LEFT           | LEFT      |
| RIGHT          | RIGHT     |
| OK/ENTER       | OK        |
| RETURN/BACK    | BACK      |
| TIME SHIFT     | SLEEP     |
| SAT. LINK      | TV/DTV    |
| i+             | INFO      |
| GUIDE          | EPG       |
| TOP MENU       | FAV       |

| ORIGINAL           | SUPERIOR     |
|--------------------|--------------|
| RED                | RED          |
| GREEN              | GREEN        |
| YELLOW/SYSTEM      | YELLOW       |
| BLUE/SEARCH        | BLUE         |
| TIMER PROG.        | SHIFT+POWER  |
| DVD                | SHIFT+1      |
| HDD                | SHIFT+2      |
| VCR                | SHIFT+3      |
| SUBTITLE           | SHIFT+       |
| SKIP NEXT          | SHIFT+ P+    |
| SKIP PREV          | SHIFT+ P -   |
| VARIABLE REPLAY    | SHIFT+LEFT   |
| VARIABLE SKIP      | SHIFT+RIGHT  |
| REC SPEED          | SHIFT+SLEEP  |
| DUBBING            | SHIFT+FAV    |
| EJECT / OPEN/CLOSE | SHIFT+       |
| PAUSE              | SHIFT+       |
| STOP               | SHIFT+       |
| REC                | SHIFT+RED    |
| REW                | SHIFT+GREEN  |
| PLAY               | SHIFT+YELLOW |
| FWD                | SHIFT+BLUE   |
|                    |              |
|                    |              |
|                    |              |

