



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV/RADIO	TV/DTV
INFO	INFO
EG	EPG
FAV	FAV
RED/PVR	RED
GREEN/V – FORMAT	GREEN
YELLOW/ASPECT	YELLOW
BLUE/TIMER	BLUE

ORIGINAL	SUPERIOR
AUDIO	SHIFT+MUTE
SUB – T	SHIFT+
P+	SHIFT+UP
P -	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

