

ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DTV / VCR	è . / A V
LIST	- / --
SEARCH	
LANG.	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TV / RADIO	TV/DTV
INFO	INFO
GUIDE	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SUBTITLE	SHIFT+
P. DOWN	SHIFT+DOWN
P. UP	SHIFT+UP
REPLAY	SHIFT+BACK
P / N	SHIFT+ TV/DTV
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

