



ORIGINAL	REPLACEMENT
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
UHF	-/--
AUDIO	
VOL+	VOL+
VOL-	VOL-
PR+	P+
PR-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
← PR	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
WHITE / FAV-	
RED / TEXT	RED
GREEN / TV/AV	GREEN

[illegible]