



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/AV	 / SOURCE
SHIFT	-/--
V – FORMAT	
VOL +	VOL +
VOL -	VOL -
CH +	P +
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/LIST	OK
← PR	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / 	RED

[illegible]