



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / RAD.	/ SOURCE
F. LIST	-/--
ASPECT	
HISTORY	
G. LIST	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMER	SLEEP
VIDEO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
OPT.	SHIFT+MENU
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
F4	SHIFT+4
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
←	SHIFT+LEFT
→	SHIFT+RIGHT
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

