



ORIGINAL	SUPERIOR
STB POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PVR	 / SOURCE
LIST	-/--
V – FORMAT	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED	RED

ORIGINAL	SUPERIOR
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
 ? / AUDIO	SHIFT+MUTE
SUBT.	SHIFT+ 
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
SKIP PREV	SHIFT+LEFT
SKIP NEXT	SHIFT+RIGHT
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE
TV	
TV POWER	SHIFT+POWER
SOURCE	SHIFT+ 
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
CH+	SHIFT+ P+
CH -	SHIFT+ P -
OK	SHIFT+OK

