



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ PORTAL	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / ZOOM /	0
/ USB	/ SOURCE
/ FOLDER	-/--
V. FORMAT	
/ / PLAY MODE	
V+	VOL+
V-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RECALL	BACK
/ SLEEP	SLEEP
TV / SAT	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED / AUDIO	RED
GREEN / OPTION	GREEN
YELLOW / TXT	YELLOW
BLUE /	BLUE
MENU	SHIFT+MENU
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
SAT	SHIFT+7
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STEP BACK	SHIFT+LEFT
STEP FWD	SHIFT+RIGHT
TIMESHIFT	SHIFT+SLEEP
TV / RADIO	SHIFT+ TV/DTV
/ FIND	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
RECORD	SHIFT+RED
REW / PAGE -	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD / PAGE+	SHIFT+BLUE

