



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ AV
PLAY LIST	-/--
ZOOM	
SOFTWARE	
VOL+	VOL+
VOL-	VOL-
PR+	P+
PR-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
← PR.	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
SHIFT	
RED / FIND	RED
GREEN / V-FORMAT	GREEN
YELLOW / TXT	YELLOW
BLUE / 	BLUE
USB	SHIFT+ / AV
PAGE+	SHIFT+UP
PAGE-	SHIFT+DOWN
SLOW – BACK	SHIFT+LEFT
SLOW – FWD	SHIFT+RIGHT
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
FAST – REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FAST – FWD	SHIFT+BLUE

