



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
LIST	-/--
MEDIA	
FORMAT	
SWAP	
FILES	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TIMER	SLEEP
TV	TV/DTV
INFO	INFO
FAV	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN / EPG	GREEN
YELLOW / TEXT	YELLOW
BLUE / OPT	BLUE
	SHIFT+ P+
	SHIFT+ P -
RADIO	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

