



ORIGINAL	SUPERIOR
MUTE	MUTE
MANU/SPKR	MENU
EXIT/DIGITAL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AVR	[Icon] / SOURCE
TEST	-/--
OSD	[Icon]
M – ROOM	[Icon]
DELAY/PREV CH	[Icon]
NIGHT	[Icon]
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SET	OK
CLEAR	BACK
CH SLEEP	SLEEP
CH SURR.	TV/DTV
DIM	INFO
GUIDE/CH	EPG

ORIGINAL	SUPERIOR
DIRECT	FAV
PAUSE	[Icon] / SMART TUBE
STOP	[Icon] / SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DOLBY SUR	SHIFT+ [Icon]
D. SKIP	SHIFT+ [Icon]
DTS SUR	SHIFT+ [Icon]
DTS NEO : 6	SHIFT+ [Icon]
TUNING+	SHIFT+ VOL+
TUNING -	SHIFT+ VOL -
PRESET+	SHIFT+ P+
PRESET -	SHIFT+ P -
LOGIC 7	SHIFT+SLEEP
TONE	SHIFT++TV/DTV
STEREO	SHIFT+INFO
MEM	SIFT+EPG
TUN – N	SHIFT+FAV

