



ORIGINAL	SUPERIOR
POWER ON	POWER
MUTE	MUTE
MENU / OSD	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
P-SCAN	-/--
DIM.	
DIRECT	
RDS	
TEST	
VOL+	VOL+
VOL -	VOL -
CH/TUNER+	P+
CH/TUNER -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK / EXIT	BACK
SLEEP	SLEEP
SURR. MODE	TV/DTV
INFO / OPTION	INFO
MEM.	EPG

ORIGINAL	SUPERIOR
TONE	FAV
DELAY	
POWER OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
AUX	SHIFT+1
CABLE / SAT	SHIFT+2
DISC	SHIFT+3
GAME	SHIFT+4
NETWORK	SHIFT+5
RADIO	SHIFT+6
SERVER	SHIFT+7
STB	SHIFT+8
TV	SHIFT+9
USB	SHIFT+0
PREV. CH.	SHIFT+BACK

